

## WARNINGS

- Do not immerse unit, cord or plug in liquid at any time
- Unplug cord from outlet when not in use and before cleaning
- Plug only into a 3-hole grounded electrical outlet of appropriate voltage
- Do not operate unattended
- Do not use this unit for anything other than intended use
- Do not use outdoors
- Always use on a firm, dry and level surface at least 12" from walls or any other obstruction
- Do not use if unit has a damaged cord or plug, in the event the appliance malfunctions, or has been damaged in any manner
- Keep children and animals away from unit
- Any incorrect installation, alterations, adjustments and/or improper maintenance can lead to property loss and injury. All repairs should be done by authorized professionals only
- Ensure that the designated power supply is adequate for continual usage
- Do not hose down mixer
- Do not operate with wet hands
- Unplug from the electrical supply prior to any maintenance or repairs

## TO INSTALL:

1. Remove unit from box and make sure all plastic, tape and packing materials are removed.
2. Place the unit on a flat, secure surface with at least 12" of open space around all sides.
3. Check to make sure the outlet of the correct voltage for this item (110V) is near. Do not use an extension cord, this item must be plugged directly into an outlet.

STANDARD ACCESSORIES - This mixer comes with one of each of the following accessories:



Flat Beater



Dough Hook



Wire Whip



Mixing Bowl

When mixing always use the correct agitator for the job. To install agitator raise into the mixing axle and rotate clockwise on the shaft until it locks into place. To remove an agitator, raise it on the shaft until it clears the lock and rotate counterclockwise and lower. All of the accessories are fitted to the mixing bowl for precise use.

Flat Beater - Used for mixing dry ingredients and can work on all speeds. Do not run for more